

Window

Installation Guideline


- ROUGH OPENING SHOULD MEASURE FRAME HEIGHT PLUS 1/2" ALL AROUND WINDOW
- USE LEVEL TO ENSURE FRAMING/WALLS ARE PLUMB
- OPENING SHOULD BE LEVEL, SOLID & CLEAN.
- MEASURE FRAME DIAGONALLY ON BOTH SIDES TO ENSURE FRAME IS SQUARE.
- USE TAPE MEASURE TO CHECK WIDTH AND HEIGHT FROM CENTER POINT TO CONFIRM NO BOWING IS TAKING PLACE
- PUSH WINDOW FRAME ALL THE WAY INTO ROUGH OPENING
- DO NOT FULLY SEAL THE BOTTOM NAILING FIN ON THE EXTERIOR TO ALLOW FOR DRAINAGE. **NOTE:** SILL PLATE ROUGH OPENING MUST BE PROTECTED WITH A WATER IMPERMEABLE MEMBRANE
- SHIM SILL 3" FROM CORNERS, MAX 24" APART (A)
- ENSURE WINDOW IS SQUARE, LEVEL, AND PLUMB
- CHECK OUTSIDE LINES BEFORE SCREWING IN FRAME
- SHIM WINDOW, SCREW IN NAILING FIN WITH #10-2" SCREW, SPRAY FOAM FROM BACK SIDE, AND ROD & CAULK THE ENTIRE INTERIOR PERIMETER OF THE WINDOW
- BEFORE SPRAY FOAMING CHECK OPERATION OF OPERATING WINDOWS. ADJUST SHIMS AS NECESSARY.



* This guideline is to assist trained & experienced installers and is not complete. installer is responsible for insuring the installed window is functional and installation complies with local codes and in accordance with CSA A440.4-07



Enhancing the Human Environment.

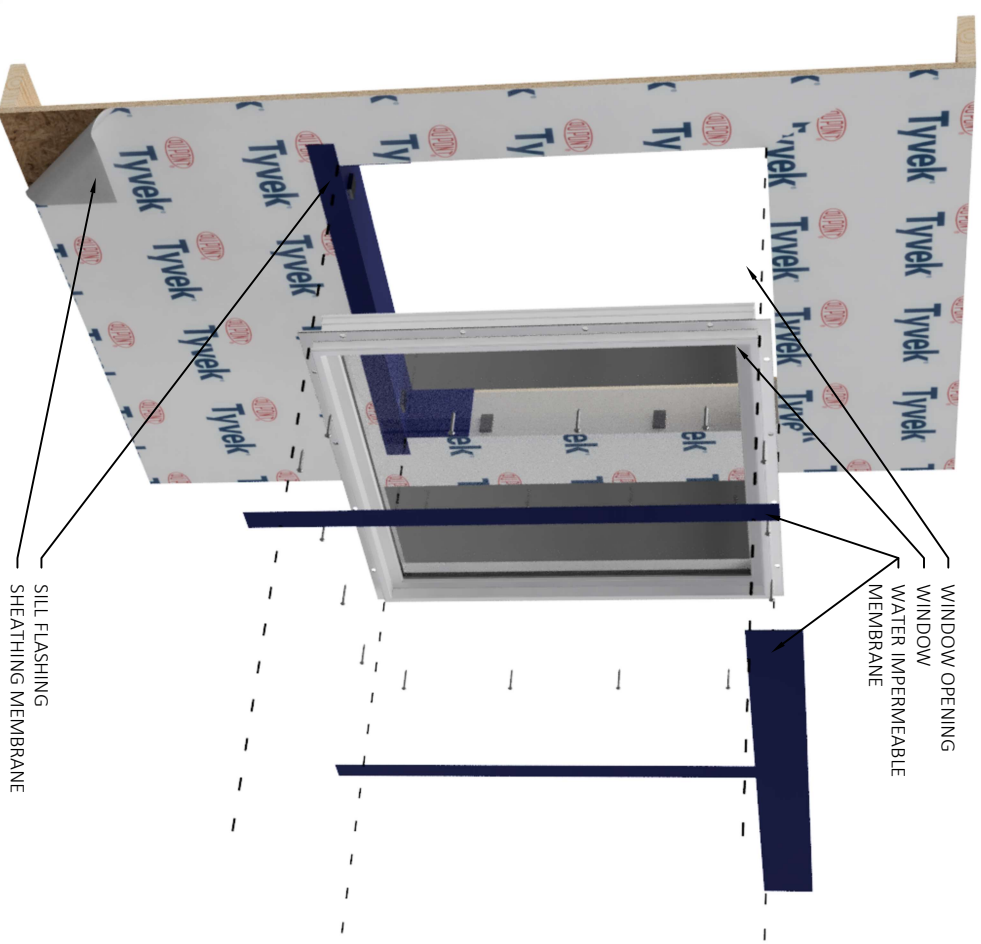

WARNING: Do not use scrapers for cleaning glass. Glass scratched by a scraper is not covered under the DUXTON Windows & Doors warranty. Do not clean glass when it is exposed to direct sunlight.